

 **Electric fireplace**

Operation and Safety Notes



Flandria

Intro

Congratulations on choosing this electric fireplace. Enjoy the cosy comfort of a fireplace with no ash or smoke and without the need for your own chimney. This fireplace is designed for mounting on the wall like a picture. You can use it as a decorative element and/or as an extra heat source.

We are sure you will enjoy using this new electric fireplace.

Please read the instructions carefully before using the electric fireplace for the first time, and then keep them in a safe place for future reference. If you pass on the appliance to someone else, be sure to hand over the instructions with it. The manufacturer and importer can accept no liability for failure to observe the information in these instructions.

Application

An electric fireplace can be placed anywhere, for example in the living room, but also in the bedroom, the (residential) kitchen, chalet or mobile home.

One of the advantages of an electric fireplace is that it is easily placed and can be moved. If you change your living room you can easily give the electric fireplace another place. In addition, the investment in an electric fireplace is low, especially when compared to traditional fireplaces and stoves. Besides this the fire also give off heat, enough for a pleasant additional heat. The unit is not designed to function as a primary heat source.

The stove is designed to be used in combination with other surrounds.

Benefits Electric Fireplaces:

- Easy to install
- Pleasant heat
- Can be placed in every room
- No emission of pollutants.
- No special equipment or flue needed.

Maintenance:

If you clean the fireplace make sure it is not on and check that the fire is completely cooled. Always turn off the power switch before any maintenance. You can clean it with a damp (not wet) cloth. Never use abrasive cleaners to clean to avoid degradation of the top layer of the fireplace

Warranty:

You have 2 years warranty on your electric fireplace after time of purchase.

Montage in Kamingehäusen

How to place the appliance in a surround

- Remove the packing material and make sure that the fireplace is not damaged before installation. In case it is damaged, contact your supplier.
- Remove the two U-shaped lugs on the sides of the appliance.
- Place the fireplace in the surround from front to back.
- Place the two U-shaped lugs back on the sides of the fireplace, press these against the surround before fixing the straps.



Safety information

Intended use

This appliance can be permanently attached to a wall as a decorative element and/or for heating purposes. It is intended solely for private indoor use, not for commercial purposes.

Warning against improper use

- Do not operate the appliance unless it is firmly attached to a wall in compliance with the safety measurements stated in these operating instructions. Never operate the appliance as a free-standing unit.
- This appliance is not suitable for recessed installation, e.g. in a chimney opening.
- This appliance must not be operated in rooms with high humidity, such as bathrooms.
- The appliance must be securely fixed to a wall, with a minimum distance of 1.20 m between the lower edge of the appliance and the floor.
- Never leave the appliance unattended while switched on. Switch it off at the main switch if you leave the room.
- Do not use the electric fireplace in conjunction with a timer or other device which could switch the unattended fireplace on automatically.
- Keep combustible material such as paper, fabric, wood, plastics, petrol or solvents away from the appliance. Take particular care to ensure that items such as upholstered furniture or curtains are at a safe distance from the appliance. Make sure you observe this point even when the appliance is switched off, so that there is no danger if it is switched on accidentally.
- The appliance must not be used in rooms containing highly flammable substances (e.g. petrol, paints, solvents, gas).
- Never cover the appliance. The openings must remain unobstructed to prevent overheating in the appliance. On no account hang washing or similar items on the appliance to dry.
- Clean the ventilation openings regularly. In particular, be sure to remove all dust from the top of the appliance.
- Do not leave children or pets unattended in the vicinity of the appliance. Explain to children the dangers that can arise from this appliance.
- Keep the remote control out of reach of children. Children could operate the fireplace incorrectly.
- Keep the packaging film away from children (danger of suffocation).
- This device is not intended for use by persons (including children) who have limited physical, sensory or mental capabilities or who lack the necessary experience and/or knowledge, unless they are supervised by a person responsible for their safety.


- Protect the device from moisture, drips and splashes. These can cause a risk of electric shock. Never place anything filled with liquid, e.g. vases, on the product.
- CAUTION: Acute danger to life from electric shock: Never attempt to repair an electrical device yourself – for your own safety, always consult the nearest Customer Service unit / specialist. This also applies to power cables.
- Protect the power cord from hot surfaces. For this reason the power cord must not touch the hot appliance and must not run along below the appliance. Take this into account when choosing where to fix it.
- Always treat the power cord with care. Protect it from sharp edges or corners and avoid squeezing or jamming it.
- Use only cable extensions or multiple-socket extensions that comply with the technical specifications. Consult a specialist dealer for advice.
- Make sure that the specifications on the rating plate correspond to the situation in your household. This appliance should only be connected to a properly earthed power outlet.
- Unplug the appliance from the mains during thunderstorms or if you will not be using it for a long period. Always grasp the plug itself, not the cable. Make sure your hands are dry before touching the mains plug.
- Never use the appliance outdoors or in rooms with high humidity, e.g. in bathrooms. Do not use the appliance close to water. Proximity to water is a risk even if the appliance is switched off.
- Do not insert any objects into the openings on the appliance.
- Risk of burns
- The appliance gets very hot during operation, especially at the bottom. Objects situated below the appliance can also get very hot. Do not touch the hot surfaces. Keep children away from the hot surfaces.
- Before cleaning the appliance or removing it from the wall, wait until it has cooled down sufficiently.

Troubleshooting

- In the interests of your own safety, check the appliance for damage before every use. If the appliance is faulty, it must not be used until it has been repaired by an expert.
 - If the fan starts making unusual noises, have the appliance checked by a specialist repair shop.
 - If the appliance has fallen or been dropped, there may be damage to internal parts that is not detectable from the outside. For this reason the appliance must be checked by a specialist before it can be used again.
 - In the event of damage/malfunction, unplug the appliance immediately.
 - Do not use the appliance if the power cord, plug or any part of the appliance is damaged.
 - If liquids or objects have got into the appliance, unplug it from the mains immediately.
- Have the appliance checked by a specialist repair shop before using it again.

Usage

- Imitation fire / Lighting function

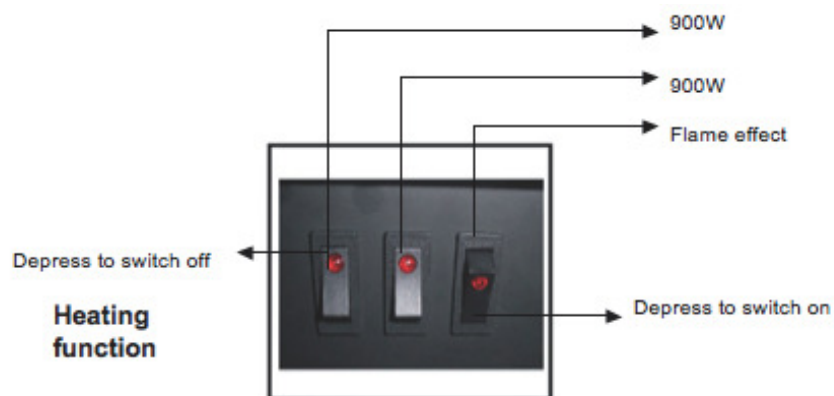

Flame on
900W heating



Flame on
1800W heating



Flame on
No heating



Flame off
1800W heating

Technical data

Model:	Flandria (FYL-2000T-BG03)
Power supply:	30 V~ 50 Hz
Power consumption:	max. 1800 W
Protection class:	I
Light bulb:	E14, 220-240 V AC, max. 25 Watt
Dimensions:	approx. 60 x 17.6x 43.4 cm
Weight:	approx. 12 kg



Enjoy your electrical fire place!